

[illegible]

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. No.	Designation	Ref. No.	Designation
001.0	Housing	549.0	Output drive types (B/B1/B2/B3/B4/C/E)
002.0	Bearing flange	549.1	Output drive sleeve (B/B1/B2/B3/B4/C/E)
003.0	Hollow shaft	551.1	Parallel key
005.0	Drive shaft	553.0	Mechanical position indicator
005.1	Motor coupling	554.0	Socket carrier for motor plug/socket connector with cable harness
005.3	Manual drive coupling	556.0	Potentiometer as position transmitter
006.0	Worm wheel	556.1	Potentiometer without slip clutch
009.0	Manual gearing	557.0	Heater
017.0	Torque lever	558.0	Blinker transmitter including pins at wires (without impulse disc and insulation plate)
018.0	Gear segment	559.0-1	Electromechanical control unit with switches, including torque switching heads
019.0	Crown wheel	559.0-2	Electronic control unit with magnetic limit and torque transmitter (MWG)
022.0	Drive pinion II for torque switching	560.0-1	Switch stack for direction OPEN
023.0	Output drive wheel for limit switching	560.0-2	Switch stack for direction CLOSE
024.0	Drive wheel for limit switching	560.1	Switch for limit/torque
025.0	Locking plate	560.2-1	Switch case for direction OPEN
058.0	Cable for protective earth	560.2-2	Switch case for direction CLOSE
070.0	Motor (only for V... motors incl. ref. no. 079.0)	566.0	RWG position transmitter
079.0	Planetary gearing for motor drive (only for V... motors)	566.1	Potentiometer for RWG without slip clutch
155.0	Reduction gearing	566.2	Position transmitter board for RWG
500.0	Cover	566.3	Cable set for RWG
501.0	Socket carrier (complete with sockets)	567.1	Slip clutch for potentiometer
502.0	Pin carrier without pins	568.1	Stem protection tube (without cap)
503.0	Socket for controls	568.2	Protective cap for stem protection tube
504.0	Socket for motor	568.3	V-seal
505.0	Pin for controls	568.4	Threaded sleeve
506.0	Pin for motor	575.1	Stem nut for output drive type A
507.0	Cover for electrical connection	583.0	Motor coupling on motor shaft
511.0	Threaded plug	583.1	Pin for motor coupling
514.0	Output drive type A (without stem nut)	584.0	Retaining spring for motor coupling
514.1	Axial needle roller bearing	614.0	EWG position transmitter
514.2	Radial seal for output drive type A	627.0	MWG 05.03 cover
516.0	Output drive type D	S1	Seal kit, small
516.1	Output drive shaft D	S2	Seal kit, large
535.1	Snap ring		
539.0	Screw plug		
542.0	Handwheel with ball handle		